



KIMBERLY CLARK HUGGIES PALLET RESKIRT DISPLAY
ASSEMBLY INSTRUCTIONS

RESKIRT COMPONENTS

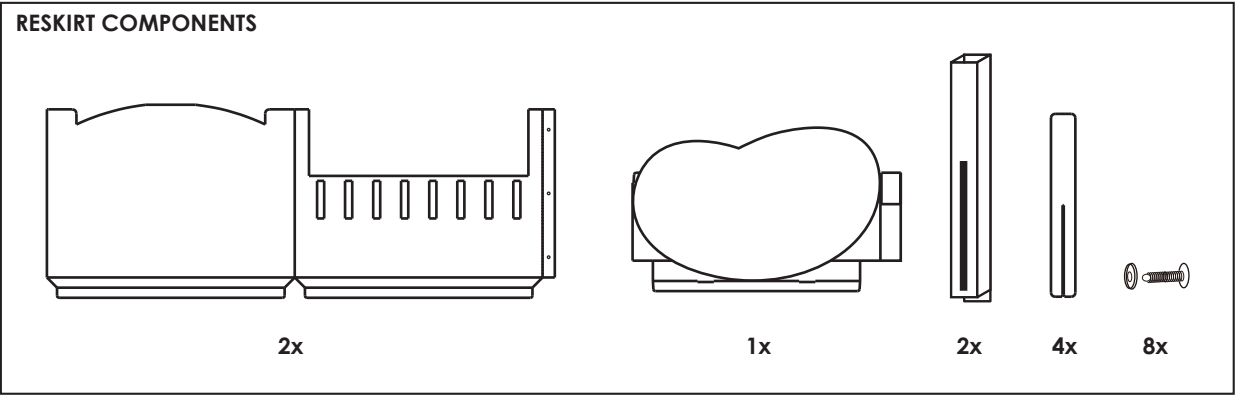


2x 1x 2x 4x 8x


PALLET COMPONENTS

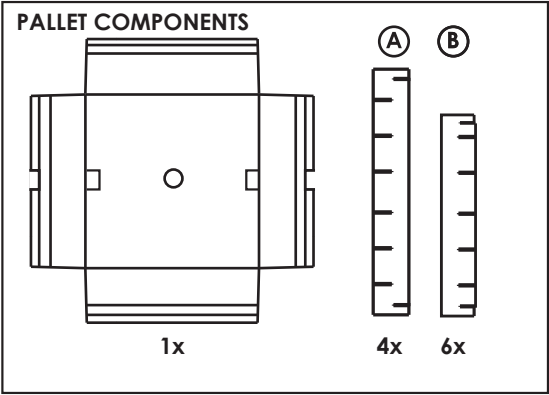

1x 4x 6x

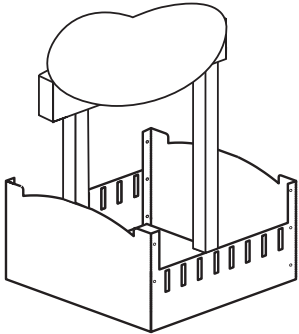


PALLET SUPPORT ASSEMBLY

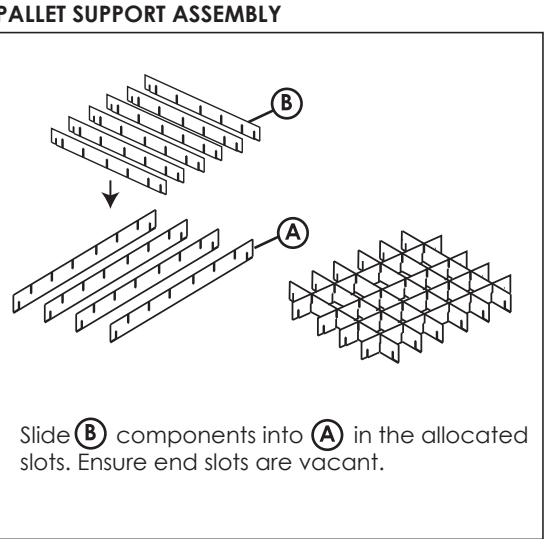

Slide **(B)** components into **(A)** in the allocated slots. Ensure end slots are vacant.


REDRESS ASSEMBLY

1.

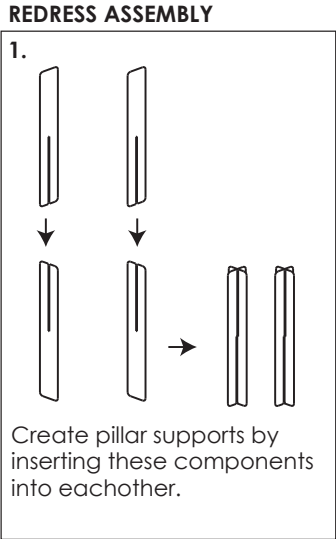


Create pillar supports by inserting these components into each other.

2.

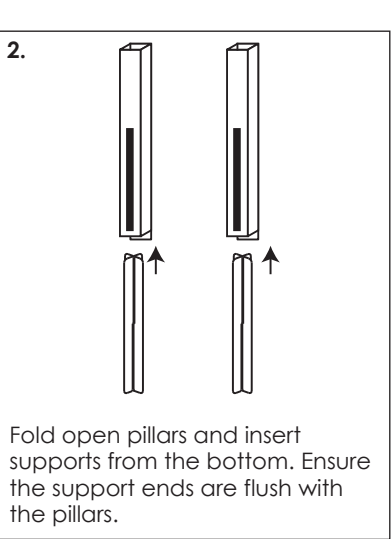


Fold open pillars and insert supports from the bottom. Ensure the support ends are flush with the pillars.

3.

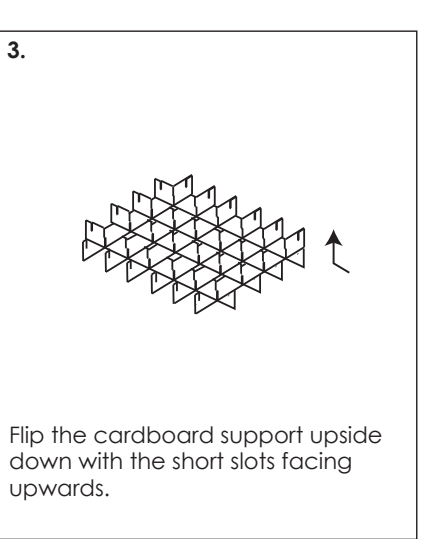


Flip the cardboard support upside down with the short slots facing upwards.

4.

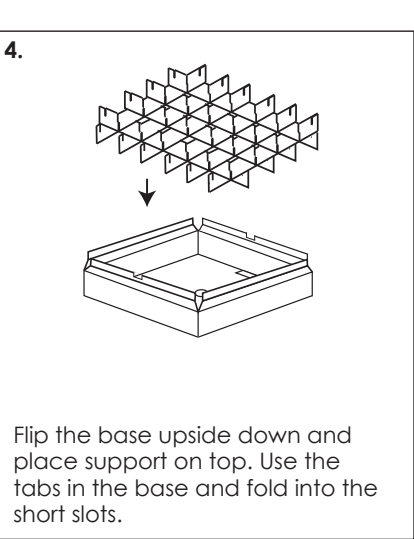


Flip the base upside down and place support on top. Use the tabs in the base and fold into the short slots.

5.

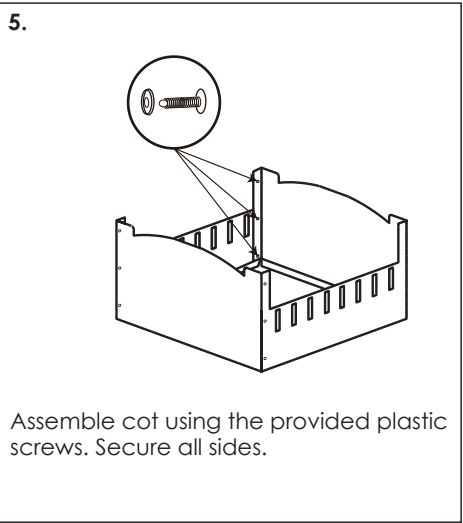


Assemble cot using the provided plastic screws. Secure all sides.

6.

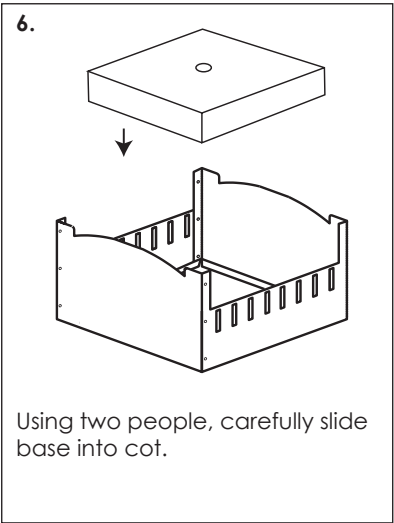


Using two people, carefully slide base into cot.

7.

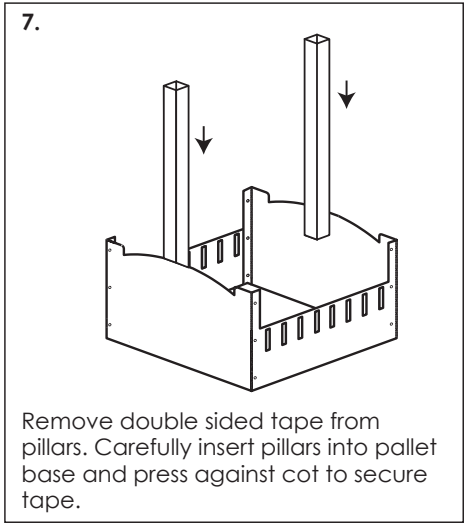


Remove double sided tape from pillars. Carefully insert pillars into pallet base and press against cot to secure tape.

8.

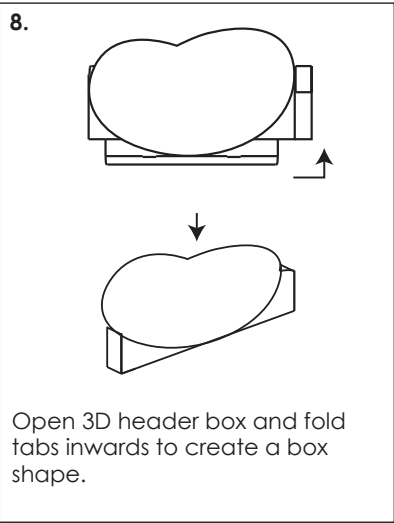

Open 3D header box and fold tabs inwards to create a box shape.

9.

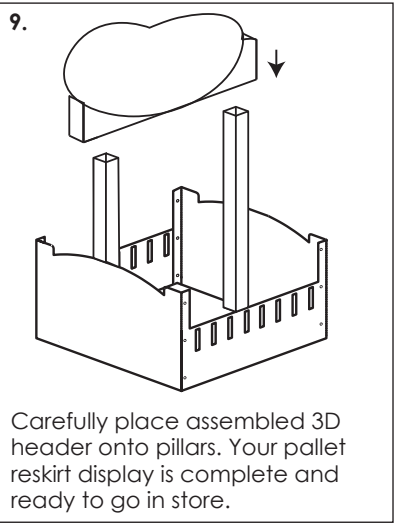

Carefully place assembled 3D header onto pillars. Your pallet reskirt display is complete and ready to go in store.